

Parts list

1. Cover
2. Wall mount
3. Number pad
4. Key ring
5. Wall fixings
6. Key
7. Clear button
8. Open button
9. Back panel
10. Back panel screw
11. Number pad screws



To site your Key Safe

- Choose a firm securely fixed surface such as a wall. Wall fixings are supplied, but you may have to supply your own if these are not suitable for the surface you are fixing the Key Safe to.
- Affix the Wall Mount (2) to the wall using the holes in the base.
- Test that it is secure and can not be pulled off.
- Fix a key to the key ring supplied (4) if required.
- The key safe is designed to be used by a door for ease of access. However, please be sensible about the security of your property, and if in doubt, site away from direct view. It is your responsibility to determine the best site, and the supplier of this item will accept no liability for any loss or damage caused by any reason when using this product.

To set the security code number

- Push the clear button (7) to clear all numbers.
- Push the open button (8) to take off the number pad (3).
- Choose your security code number, minimum of 3 digits, maximum of 10 digits.
- Remove the back panel (9) by undoing the back panel screw (10).
- Turn the number pad screws (11) 180° so that the arrow is pointing downwards for any of the numbers in your security code. A small key (6) is supplied for you to use to do this.
- You have now saved the security code number.
- The security code number can be amended at this time by turning the number pad screws on the selected numbers 180° so that the arrows are facing upwards. This "clears" the code and allows you to start again.
- **Once the key safe number pad has been placed on the wall mount, it CAN NOT BE REMOVED UNLESS THE CORRECT NUMBER IS KNOWN. You must practise using the key pad BEFORE placing it in the wall mount. This will check that the security code that you want to use is working correctly, and allow any changes before it is too late!**
- **THIS IS VERY IMPORTANT. We can not accept any returns for Key Safes that can not be opened unless faulty.**

- Make a note of the security code number inside the house or on your mobile phone or another safe place etc., so that in the event of the security number being lost or forgotten, the Key Safe can be opened. There is a space at the bottom of these instructions where you can write it down. There is no access without the key pad other than forcing the Key Safe off the wall and opening by force.
- Once you are entirely happy that you have followed the above instructions, noted your security code, and checked that it works, replace the back panel and screw.

To use the Key Safe

- Take off the cover (1)
- Push the clear button (7) to clear all numbers.
- Press the number keys for your chosen security code.
- If you make a mistake, press clear and start again.
- Push the open button (8).
- The number pad can now be removed from the wall mount.

PACKAGING:

- Dispose of the packaging at your local recycling centre.
- Dispose of paper and carton separately from plastic bags at your local recycling centre.
- Dispose of the item at the end of its lifespan at your local authorised household waste recycling centre.

My security code number is

Keep these instructions in a safe and secure place for future use.